

**MONTÁŽNÍ NÁVOD**  
**MOUNTING INSTRUCTION**



# MONTÁŽNÍ NÁVOD

## TERM

**1**

1.Pozor: Dávejte pozor, abyste při utahování nepoškodili o-kroužek, který zajišťuje těsnost.

**2.a (PEX 16x2)**

2.Pozor: Přívod teplé vody na straně odříznuté vložky! Před montáží konektorů je možné osadit rozetu a maskovací manžety v barvě spoje (doplňkové vybavení). Při instalaci svěrného šroubení 16x2 nepoškodte o-kroužky zaručující těsnost.

**3**

3.Pozor: Regule průtoku musí být v souladu s produktovým listem.

**4**

•	1	2	3	4	5	6
8°C	12°	16°	20°	24°C	28°	30°C

**5**

**2.b (Cu 15x1)**

4.Pozor: Přívod teplé vody na straně odříznuté vložky! Před montáží konektorů je možné osadit rozetu a maskovací manžety v barvě spoje (doplňkové vybavení). Odstraňte veškeré zbytky ostrého materiálu zvnějšku trubky 15x1, které by mohly poškodit těsnění spojky při natlačení na trubku. Po nasazení spojky na trubku nejprve zkontrolujte, zda neteče trubku silným tahem otočit a/nebo vysunout. Poté zkontrolujte hydraulickou těsnost. Zachovejte 90° mezi trubkou a ventilem.

### Záruční podmínky:

- Vyrobcem poskytuje záruku po dobu 2 let od data nákupu.
- Oznámení o závadě nebo poškození přijímáme e-mailem: reklama@pmh-co.cz
- Pro provedení záruční opravy je třeba vadný výrobek doručit na adresu: P.M.H. Design s.r.o., Přísečná 556, 381 01 Český Krumlov
- Záruka se nevztahuje na díly, které během své životnosti podléhají přirozenému opotřebení a na vady vzniklé v důsledku instalace a používání v rozporu s návodem, na vady nesoucí známky mechanického nebo tepelného poškození nebo známky zásahu uživatele.

# ASSEMBLY INSTRUCTIONS

## TERM

### 1

**Attention:**  
Make sure not to damage the o-ring, which is responsible for the tightness between the heater and the nipple, when tightening it.

### 2.a (PEX 16x2)

**Attention:**  
**Power supply on the side of the cut-off insert !!**  
Before installing the connectors, it is possible to install the rosette and masking sleeves in the color of the connection (additional equipment).  
Make sure that when installing the 16x2 coupler, do not damage the o-rings responsible for the tightness of the coupler between the installation and the connection.

### 3

### 4

	1	2	3	4	5	6
	8°C	12°	16°	20°	24°C	30°C

### 5

**Attention:**  
Flow regulation in accordance with the Product Data Sheet ([www.varieterm.pl/en/download/data-sheets](http://www.varieterm.pl/en/download/data-sheets)).

### 2.b (Cu 15x1)

**Attention:**  
**Power supply on the side of the cut-off insert !!**  
Before installing the connectors, it is possible to install the rosette and masking sleeves in the color of the connection (additional equipment). Remove sharp material residues from the outside of the tubing that may damage the o-rings inside the fitting when pressing onto the tubing. After crimping the coupler, first check that it is not possible to turn and / or slide the tube out by pulling it STRONGLY, and then check the hydraulic tightness. Maintain a 90° angle between the tube and the heater.

**Terms of warranty:**

- The manufacturer provides a warranty for a period of 2 years from the date of purchase.
- The warranty does not cover parts that are subject to natural wear and tear during their lifetime, and defects caused as a result of installation and use inconsistent with the instructions, defects bearing signs of mechanical or thermal damage or signs of user interference.
- The Purchaser loses all rights resulting from the guarantee in the event of: 1) loss or destruction of the proof of purchase, 2) unauthorized repairs, disassembly, 3) improper or inconsistent with the instructions for use.

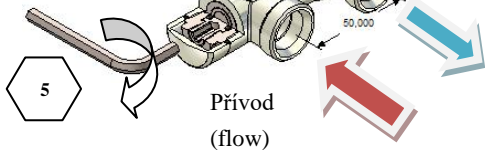
**Montážní návod sady TERM**

Installation and setting details are available at [www.pmh-co.cz](http://www.pmh-co.cz)

**Levá varianta (left)**

**maximální síla: 3Nm**

při zavírání ventilu  
utahujte opatrně

**Pravá varianta (right)**

Zpátečka  
(return)

